



ASSEMBLY AND INSTALL INSTRUCTIONS

(GENERIC FOR ALL VERTICAL MANAGERS)

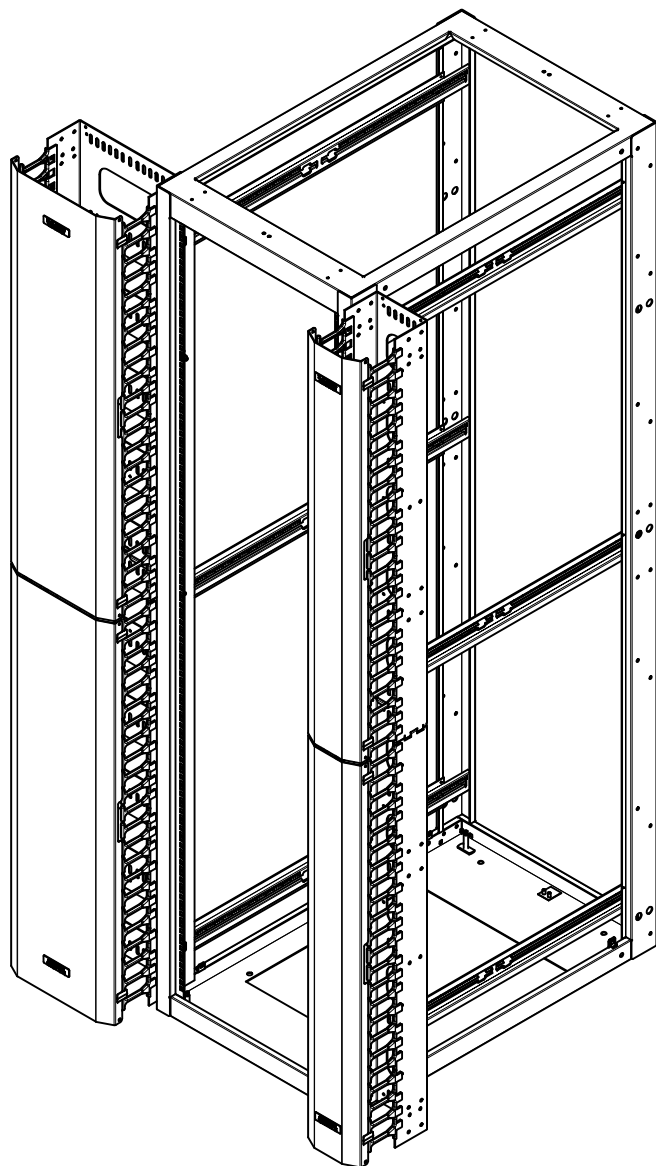

** RFPR Mounting

** RACK Mounting

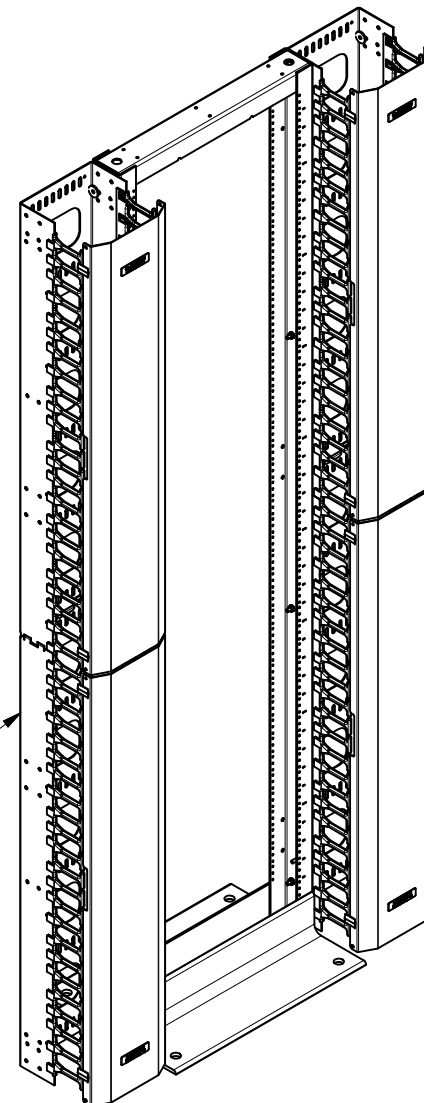


R.F. MOTE
A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

NOTE:

- * All RHDV items will come pre-assembled.
- * In the box: 2 pre-assembled bodies, 2 assembled doors, and a hardware package.

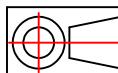


The information contained herein is
proprietary and confidential to R.F.MOTE LTD.
It may not be reproduced or further
disseminated, in whole or in part, without
prior written consent from R.F.MOTE LTD.


TOLERANCES	DESCRIPTION		
FRAC. $\pm 1/16"$	PART NUMBER GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS		
ANGLE $\pm 1.0^\circ$			
HOLES $\pm 0.003"$			
0.000 $\pm 0.015"$	DATE 25-Jun-24	MASS 133.25 lb	REV 00
	AUTHOR gillison i	SHEET 1 OF 5	

1. Mounting Cable Managers to Racks & RHDVs:


- a. Position the bottom half of the manager next to the Rack or RFPR (4 post rack cabinet).
- b. Attach the manger to the Rack / RFPR using 1 bag of the 1/4-20 nuts and bolts supplied. (4x half body) (See Detail A)
- ** Note: Do not fully tighten.
- ** Note: The fender washers are used for CPI's VCM mounting on R.F.MOTE product.
- c. Position the top half of the manager next to the Rack or RFPR and lower it into position using the offset tabs to align and lock the body's together. (See Detail B)
- d. Once bottom and top bodies are mounted, finish tightening down all hardware.
- d. Repeat step b. for mounting another VCM on the other side or between another Rack or RFPR.

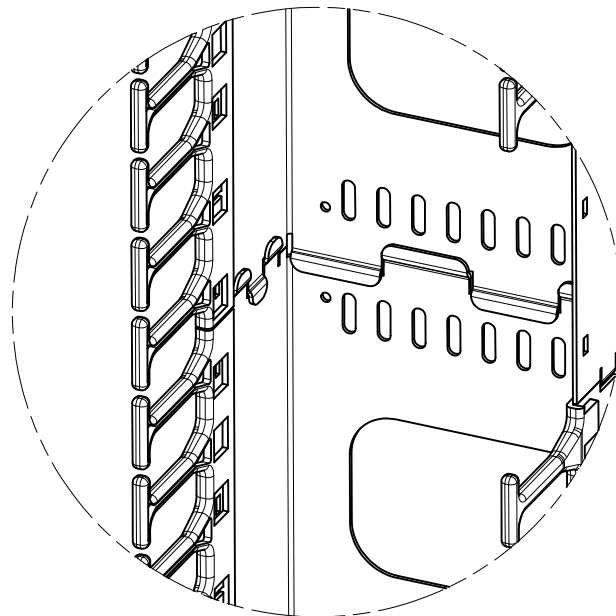

DETAIL B

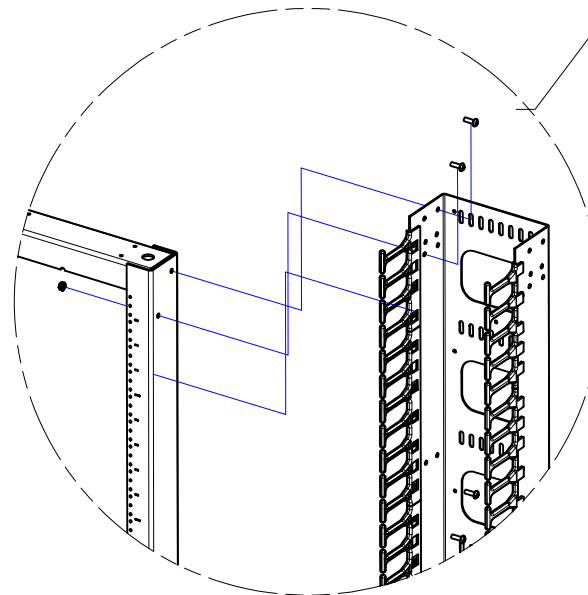

DETAIL A

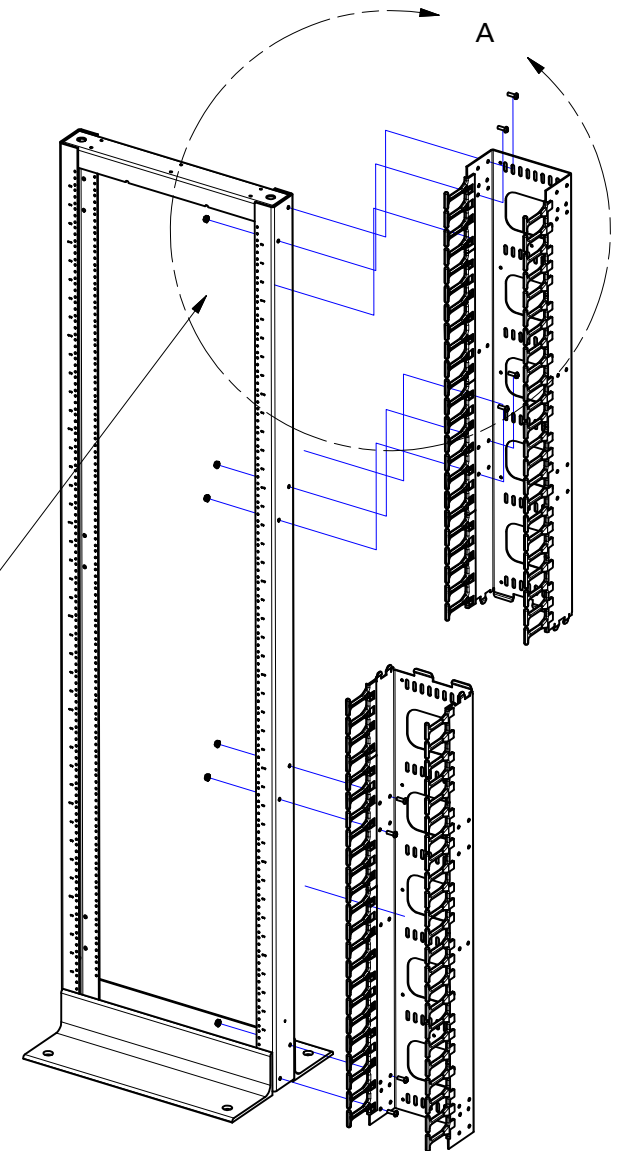


R.F. MOTE

A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES DESCRIPTION

 FRAC. $\pm 1/16"$
ANGLE $\pm 1.0^\circ$
HOLES $\pm 0.003"$
0.000 $\pm 0.015"$

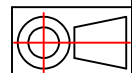

The information contained herewithin is proprietary and confidential to R.F.MOTE LTD. It may not be reproduced or further disseminated, in whole or in part, without prior written consent from R.F.MOTE LTD.

PART NUMBER
GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS

DATE
25-Jun-24

AUTHOR
gillison i

MASS
133.25 lb

REV
00

SHEET 2 OF 5


1. Assembling Cable Manager

- Remove items from box.
- Remove the doors off of both half's.
- Align both bodies flush and plum with the offset tabs facing each other.
Slide them together engaging the tabs into one another. (See Detail A)
- Once done, the manager is ready for mounting.


****Note:** When installing, mounting the bottom half of the manager to the Rack or RFPR before the top may be easier for handling.

2. Assembling Doors



- Locate the small square on the side flanges.
****Note:** This end will always attach facing the outside top and bottom of the full manager.
(Mote label on top side of assembly)
 - Once the outside ends are located, align the edge roughly flush with the last finger and apply pressure where the clips are located.
The door will snap-on into place (4x) (See Detail B)
- **Note:** The doors can open from either side.

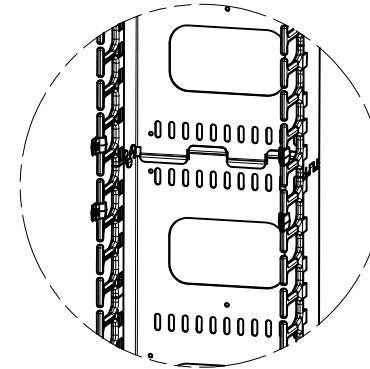

DETAIL A

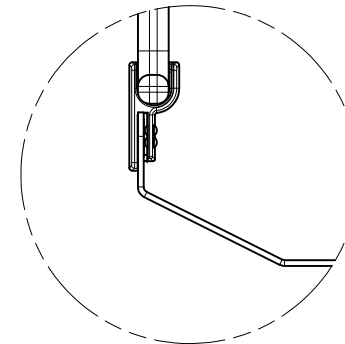

DETAIL B

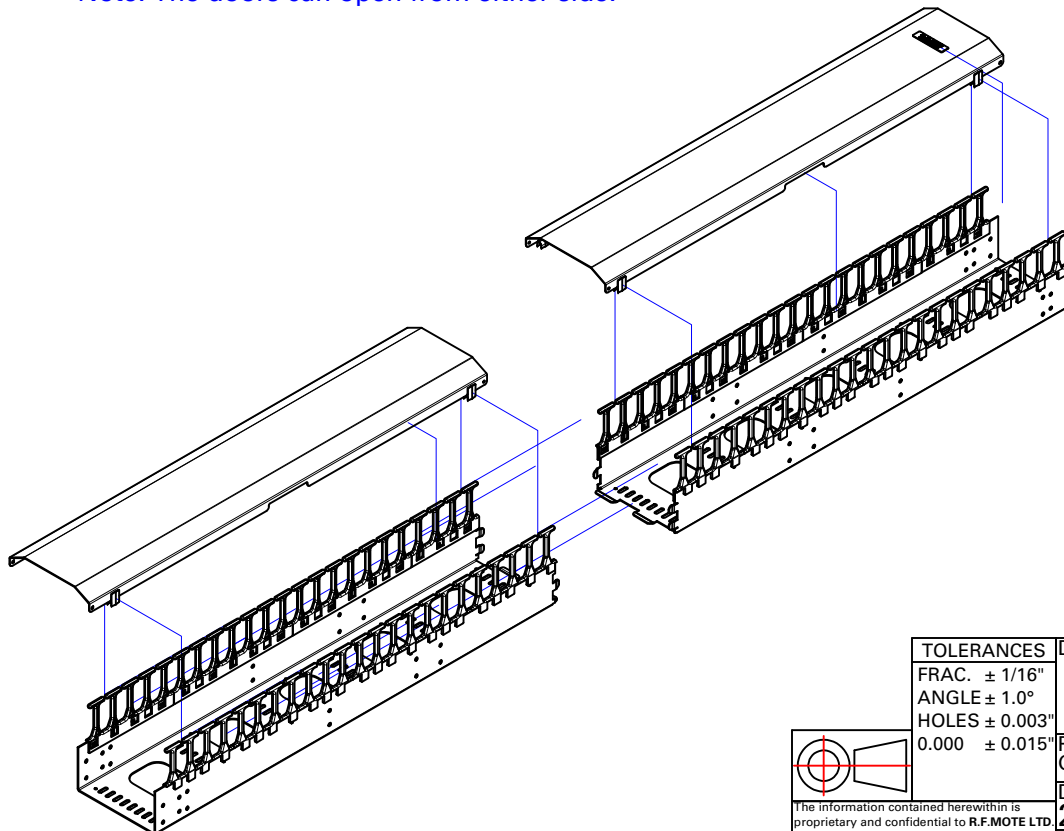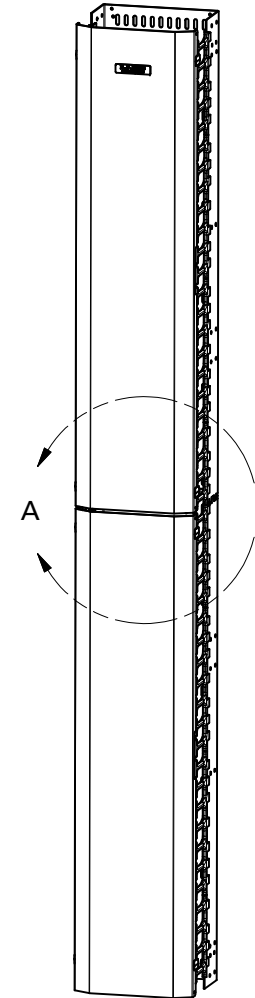


R.F. MOTE

A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES DESCRIPTION

 FRAC. $\pm 1/16"$
ANGLE $\pm 1.0^\circ$
HOLES $\pm 0.003"$
0.000 $\pm 0.015"$

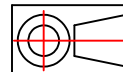

The information contained herein is
proprietary and confidential to R.F.MOTE LTD.
It may not be reproduced or further
disseminated, in whole or in part, without
prior written consent from R.F.MOTE LTD.

PART NUMBER
GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS

DATE
25-Jun-24

AUTHOR
gillison i

MASS
17.86 lb

REV
00

SHEET 3 OF 5

1. Assembling DB-EX Cable Manager

- Remove items from box.
- Remove the doors off of all half bodies.
- Begin with aligning 2 bodies flush together with the offset tabs facing one another. Slide them into each other engaging the tabs and therefore locking the bodies together. (See Detail A)
- Repeat step c. with the other 2 body half's.
- With the hardware provided, fasten both full bodied managers back to back, flush and plum. (See Detail B)

**** Note:** Do not tighten fully until all screws and nuts are installed.

- Once done, the manager is ready for mounting.
(See Page 2.)

****Note:** When installing, mounting the bottom half of the manager to the Rack or RFPR before the top and the backside, may be easier for handling.

2. Assembling Doors


- Locate the small square on the side flanges.

****Note:** This end will always attach facing the outside top and bottom of the full manager.


(Mote label on top side of assembly)

- Once the outside ends are located, align the edge roughly flush with the last finger and apply pressure where the clips are located. The door will snap-on into place (4x)
(See Detail C)


****Note:** The doors can open from either side of the manager.

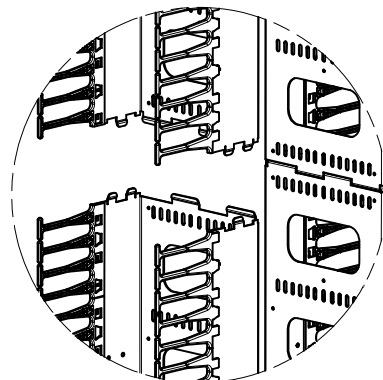


DETAIL A

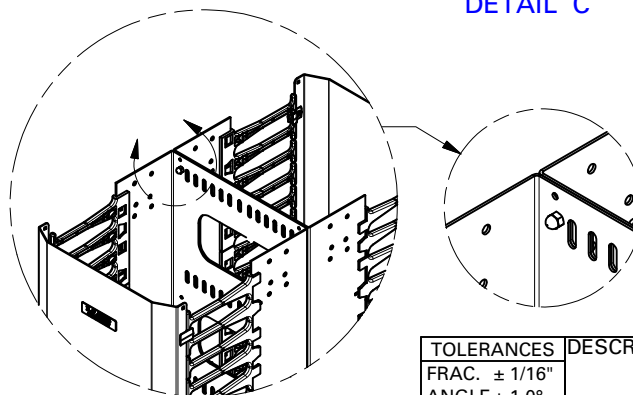

DETAIL B

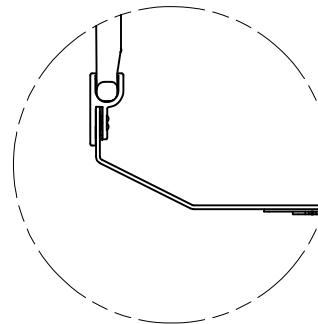

DETAIL C

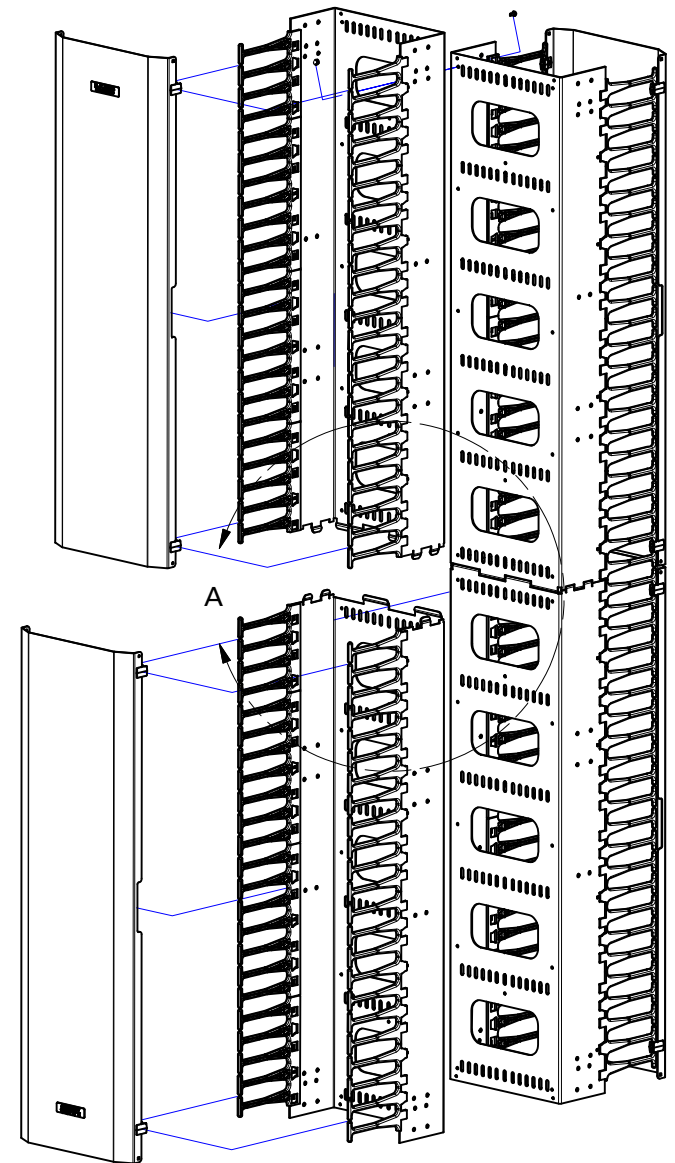


R.F. MOTE

A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES DESCRIPTION

 FRAC. $\pm 1/16"$
ANGLE $\pm 1.0^\circ$
HOLES $\pm 0.003"$
0.000 $\pm 0.015"$

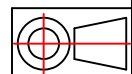

The information contained herein is
proprietary and confidential to R.F.MOTE LTD.
It may not be reproduced or further
disseminated, in whole or in part, without
prior written consent from R.F.MOTE LTD.

PART NUMBER
GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS

DATE
25-Jun-24

AUTHOR
gillison i

MASS
26.5 lb

REV
00

SHEET 4 OF 5

1. Assembling HDRFK Cable Manager

- Remove items from boxes.
- Remove the doors off of the half bodies.
- Begin with aligning the RHDV bodies flush together, with the offset tabs facing one another. Slide them into each other engaging the tabs and therefore locking the bodies together. (See Detail A)
- With the hardware provided in the HDRFK box, fasten the back sub-assembled sides to the back of the manager. (See Detail B)

****Note:** Back assembled sides have approx. 1" of material past fingers on one end only.

This end is attached towards the outer ends of the manager. (See Detail B Detail)

- With the hardware provided, fasten the manager to the Rack or RFPR. (See Detail B)

**** Note:** Do not tighten fully until the rear sided sub assembly's are installed.

- Once done, the manager is ready for mounting. (See Page 2.)

****Note:** When installing, mounting the bottom half of the manager to the Rack or RFPR before the top and the backside, may be easier for handling.

2. Assembling Doors


- Locate the small square on the side flanges.

****Note:** This end will always attach facing the outside top and bottom of the full manager.


(Mote label on top side of assembly)

- Once the outside ends are located, align the top edge of door roughly flush with the last finger and apply pressure where the clips are located. The door will snap-on into place (4x) (See Detail C)


****Note:** The doors can open from either side of the manager.

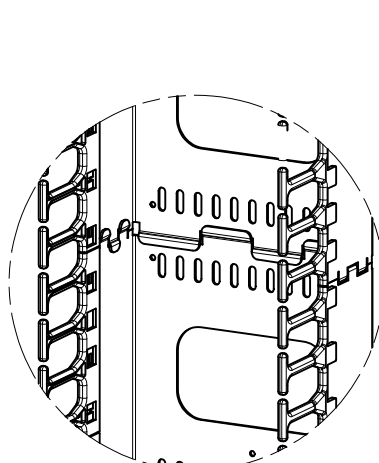


DETAIL A

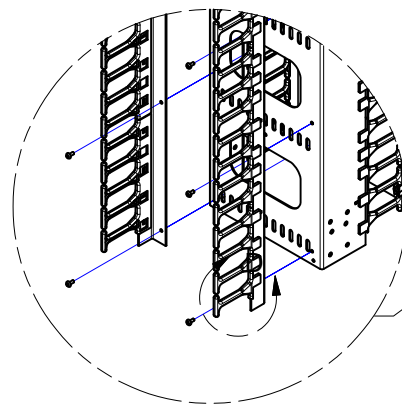

DETAIL B

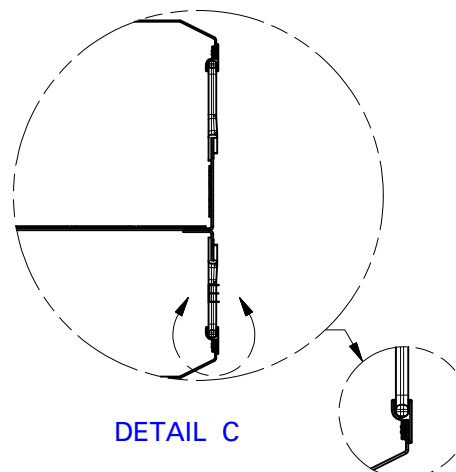

DETAIL C

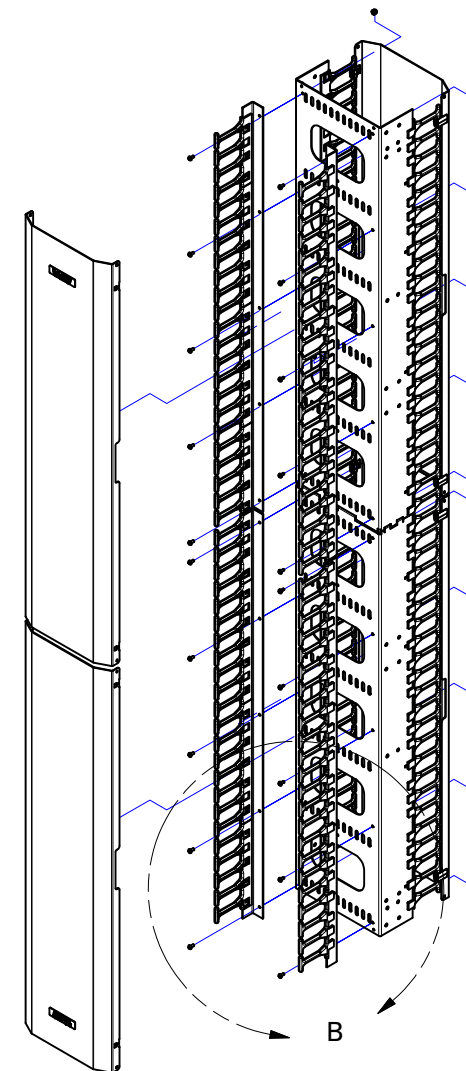


R.F. MOTE

A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES

 FRAC. $\pm 1/16"$
ANGLE $\pm 1.0^\circ$
HOLES $\pm 0.003"$
0.000 $\pm 0.015"$

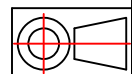

The information contained herein is
proprietary and confidential to R.F. MOTE LTD.
It may not be reproduced or further
disseminated, in whole or in part, without
prior written consent from R.F. MOTE LTD.

DESCRIPTION

PART NUMBER
GENERIC RFM-RHDV/HDRFK ASSEMBLY& INSTALL INSTRUCTIONS

DATE
25-Jun-24

AUTHOR
gillison i

MASS
29.45 lb

REV
00

SHEET 5 OF 5