


Install without Wall Mount Extender:

- 1) Use supplied hinge as template to mark wall in desired installation location
- 2) Install minimum #12 screw into location A, leaving 3/8" protrusion
- 3) Install cabinet onto protruding screws and tighten to wall
- 4) Install screws into remaining hinge holes and tighten
- 5) Fasten draw latch B to cabinet
- 6) Locate Lock Latch C on wall and fasten using suitable fastener

Install with Wall Mount Extender:

- 1) Using Extender as template, mark 4 mounting location D on wall
- 2) Install minimum #12 screw into location D, leaving 3/8" protrusion
- 3) Install Extender onto protruding screws and tighten to wall
- 4) Install 1/4-20 x 3/4 screws into F leaving 3/8 protrusion
- 5) Install Cabinet onto protruding screws and tighten
- 6) Install remaining 1/4-20 x 3/4 screws with keps nuts
- 7) Fasten draw latch B to cabinet
- 8) Fasten Lock Latch C to Extender

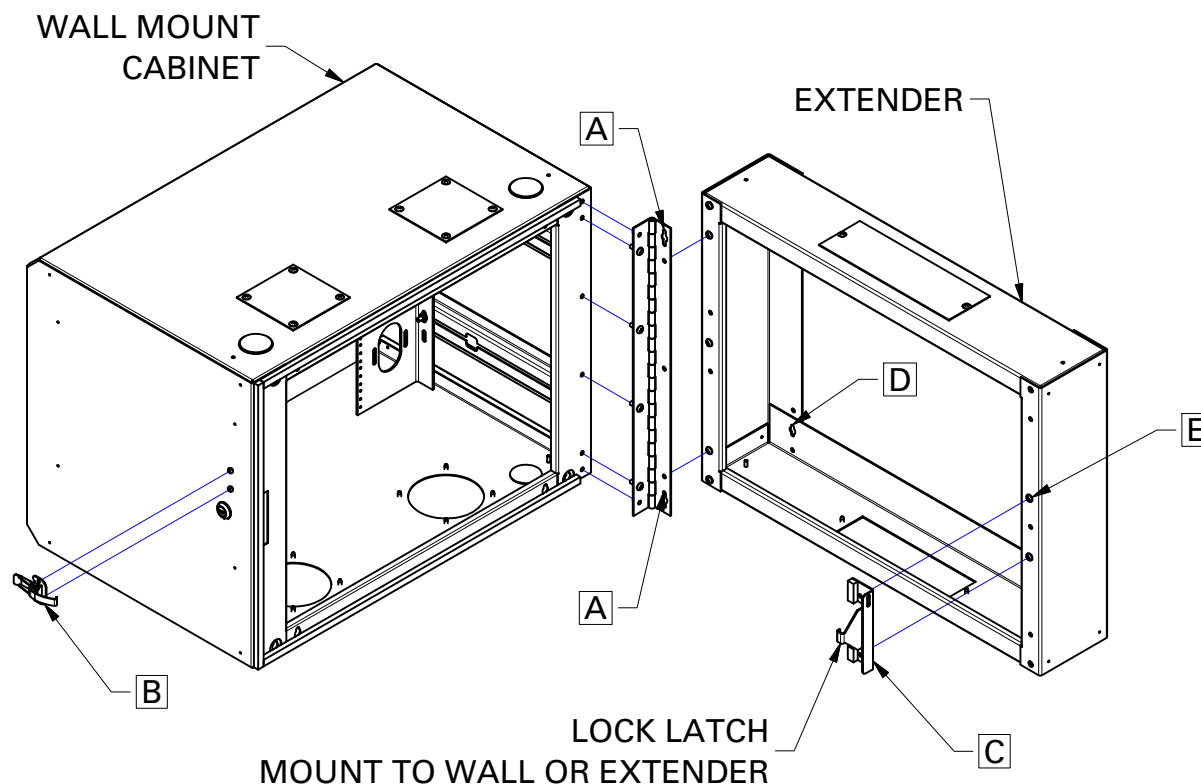


R.F. MOTE

A division of Chatsworth Products

214 NEWKIRK RD.
RICHMOND HILL, ONTARIO
L4C 3G7
PHONE (905) 884-5250
FAX (905) 737-5188

TOLERANCES
FRAC. $\pm 1/16"$
ANGLE $\pm 1.0^\circ$
HOLES $\pm 0.003"$
0.000 $\pm 0.015"$



The information contained herewithin is
proprietary and confidential to R.F.MOTE LTD.
It may not be reproduced or further
disseminated, in whole or in part, without
prior written consent from R.F.MOTE LTD.

DESCRIPTION

WALL MOUNT CAB, EXTENTION MOUNTING
INSTRUCTION

PART NUMBER

RFM-WM-ASSY-X-Instruction

DATE

08-Sep-25

AUTHOR

Fred L.

MASS

98.19 lb

REV

00

SHEET 1 OF 1